Snow DEFENDER™ 6500

Installation Instructions

The Snow Defender™ 6500 is for standing seam roofing only. It is designed to fit standing seam panels in seam width up to 3/8'' and most 1'' to 1-1/4" high. Using a 7/32'' hex bit unscrew the set screws till they are flush on the inside wall. Place the guard on the seam of the roof. The snow guard blade needs to be towards the eave. Torque all set screws. Set screws are to be torqued at 220 inch pounds.

Note: Most electric & cordless drills will not achieve 220 inch pounds. It is recommended to use a torque wrench.

Towards ridge

Face plate towards the eave.

Failure to install an adequate amount of snow guards will void the warranty.
Visit www.snowdefendercalculator.com to use our snow guard calculator to estimate the amount needed.

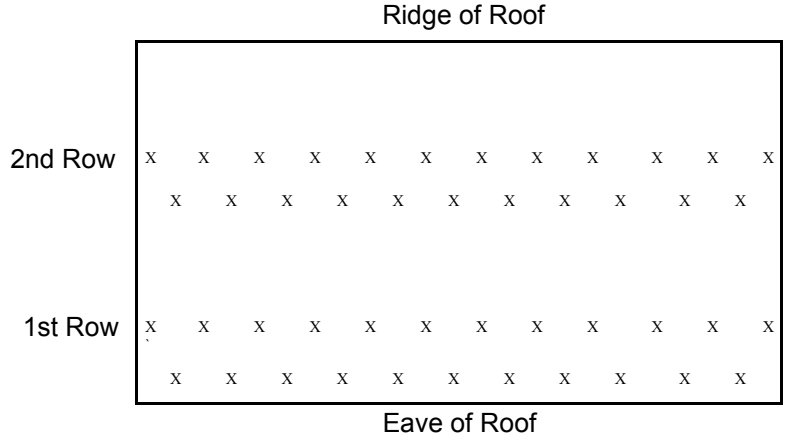

Remember it is very important to install the guards properly with the correct quantities. Do not only put snow guards over doorways, walkways, etc.